0 24847 60687 4

FORM MS-3580-01/16/2009
REPLACES FORM MS-3580-05/19/2008
FILE IN SECT. 2 OF SERVICE MANUAL

Illustrated Parts List

Model Series

44L700

TYPE NUMBER
0025 through1224.

TABLE OF CONTENTS

Air Cleaner 6
Alternators 8
Blower Housing/Shrouds 6
Camshaft 3
Carburetor 5
Controls 7
Crankshaft 3
Cylinder 2
Cylinder Head 4
Electric Starter 7
Engine Sump 2
Exhaust System 5
Flywheel 7
Ignition 8
Kit-Carburetor Overhaul 5
Gasket Set - Engine 3
Gasket Set - Valve 4
Lubrication 3
Piston, Rings, Connecting Rod 3
Valves 4

Not for Reproduction

BRIGGS & STRATTON ®

PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

44L700

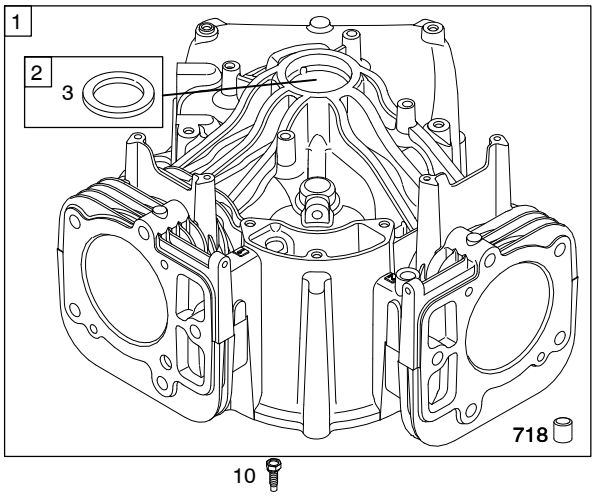

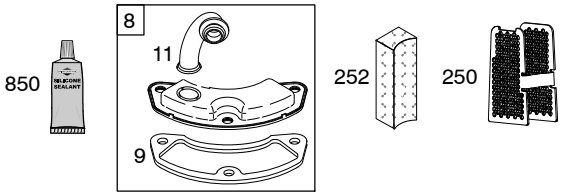

1058 OPERATOR'S MANUAL



1330 REPAIR MANUAL



1319 WARNING LABEL

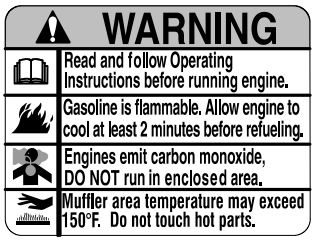
WARNING
Read and follow Operating Instructions before running engine.
Gasoline is flammable. Allow engine to cool at least 2 minutes before refueling.
Engines emit carbon monoxide, DO NOT run in enclosed area.
Muffler area temperature may exceed 150°F. Do not touch hot parts.

REQUIRED *when replacing parts with warning labels affixed.*

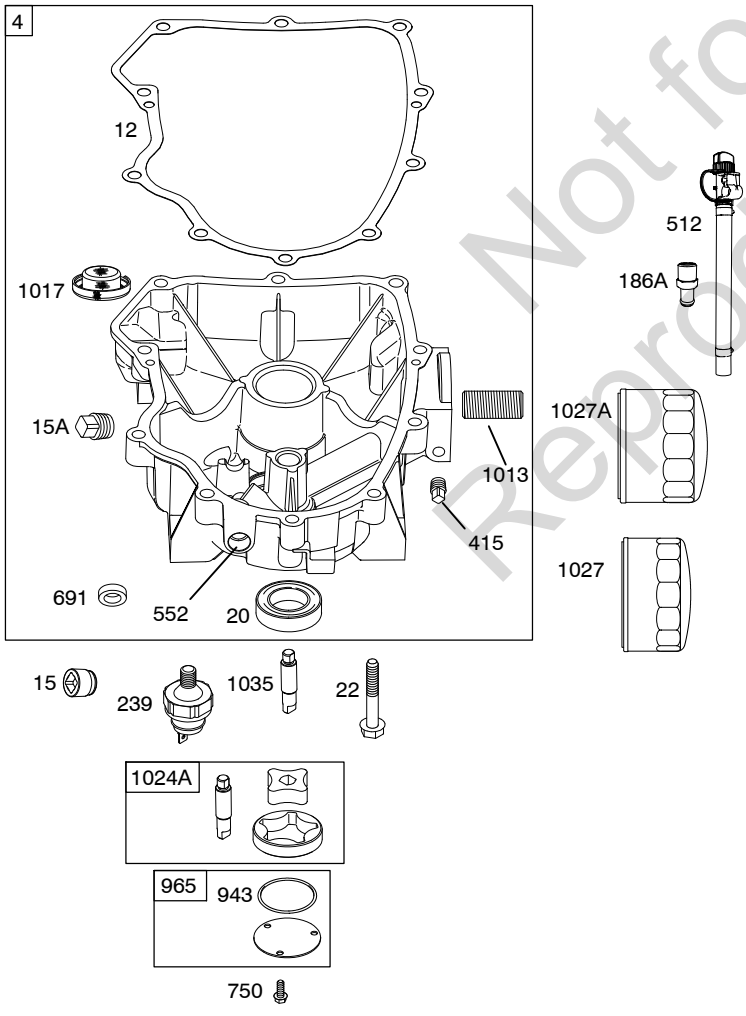

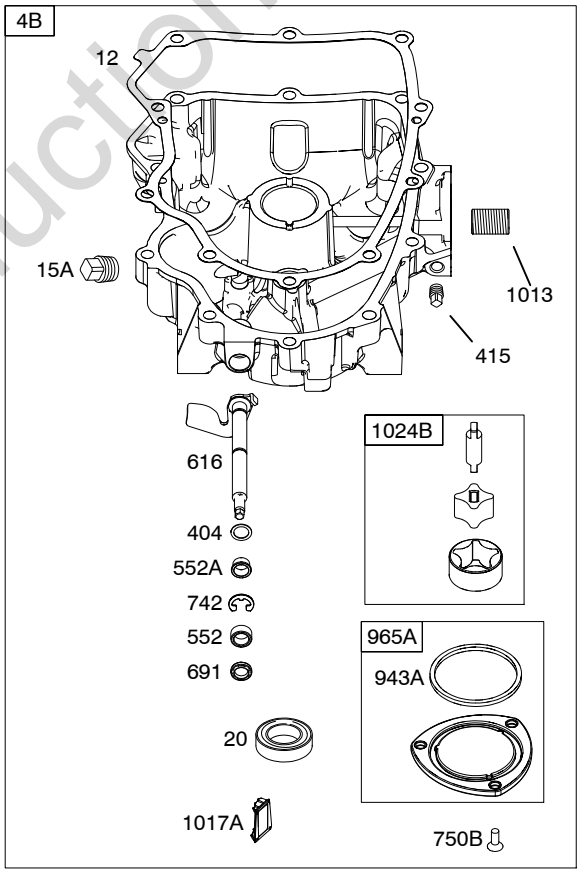

Not for Reproduction

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

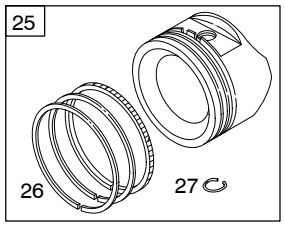



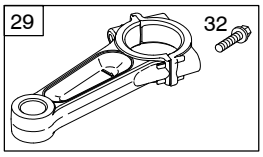

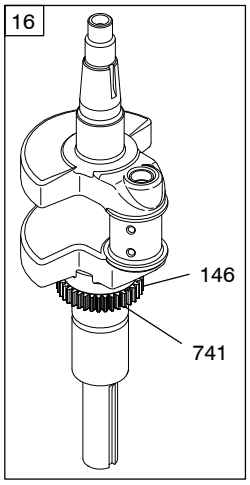

24

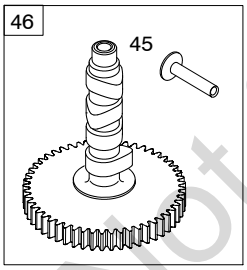

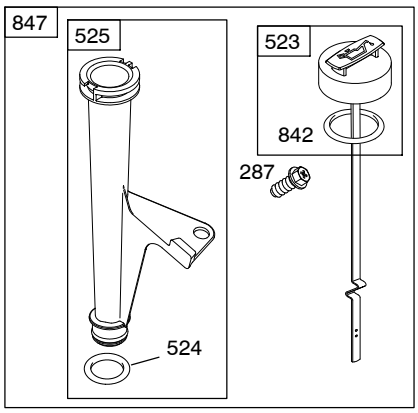

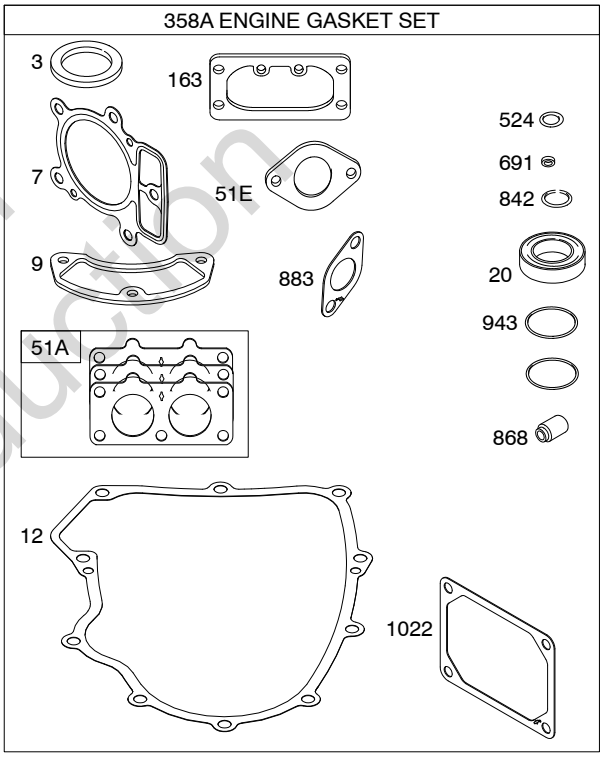

Not for Reproduction

44L700

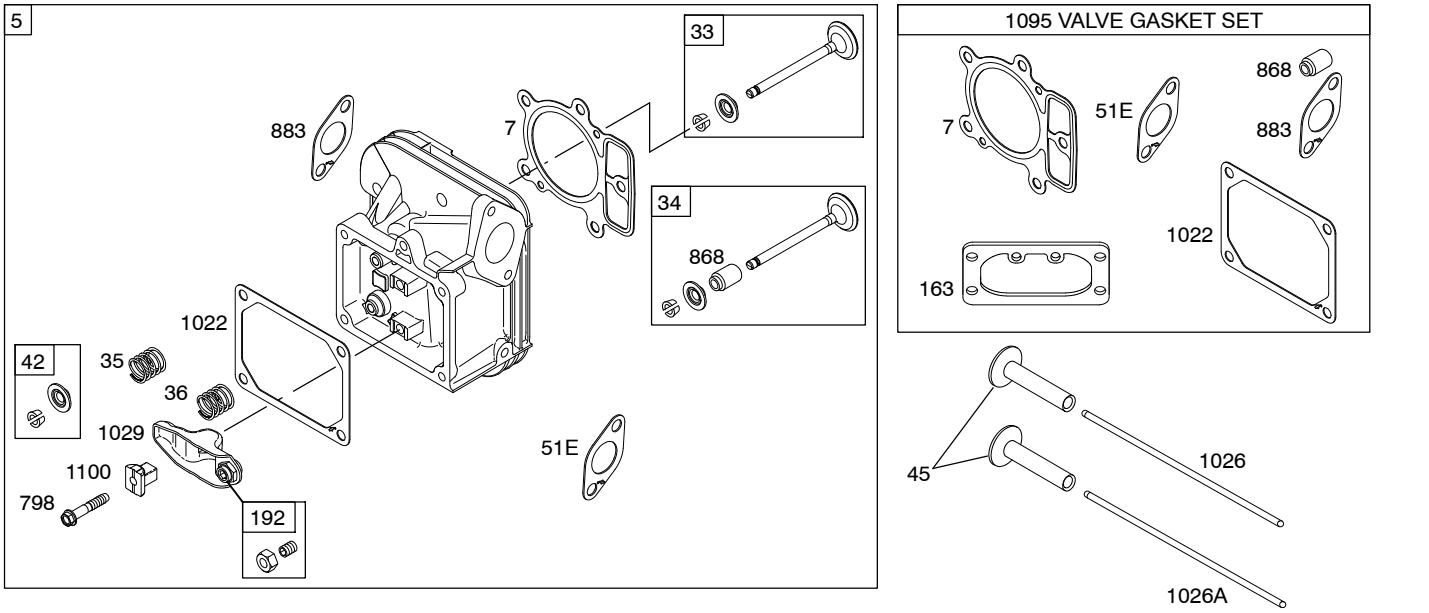

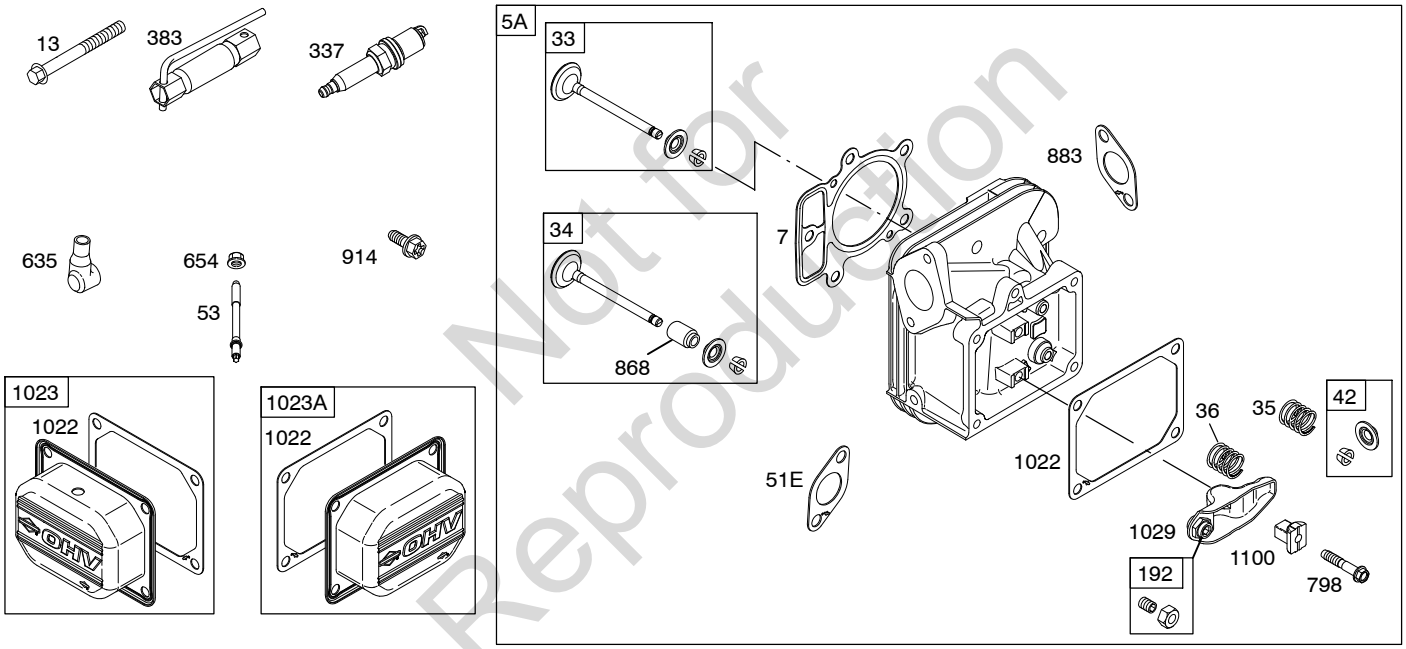

Not for Reproduction

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

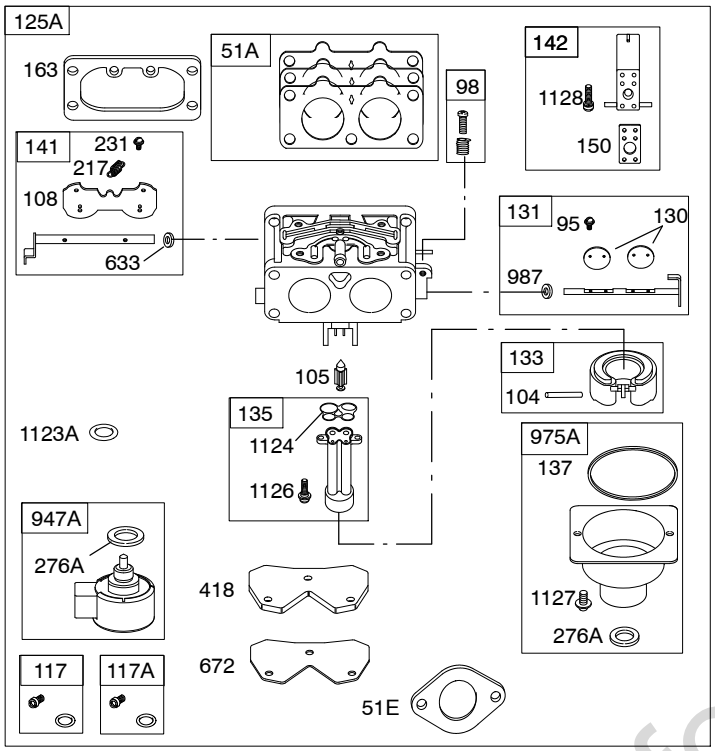

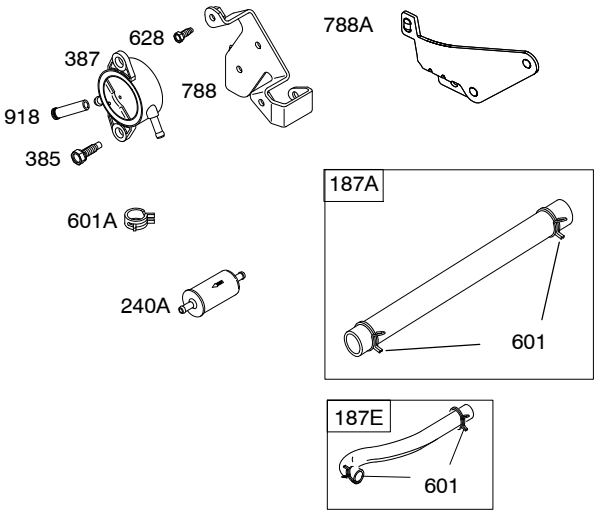

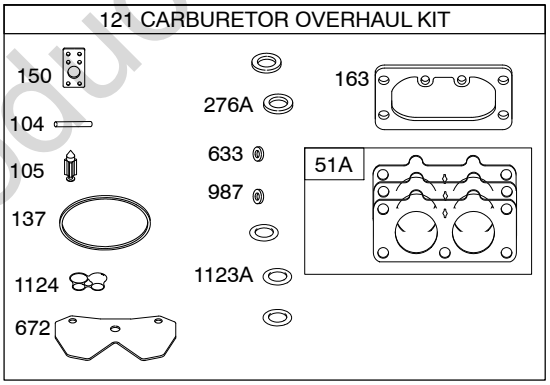

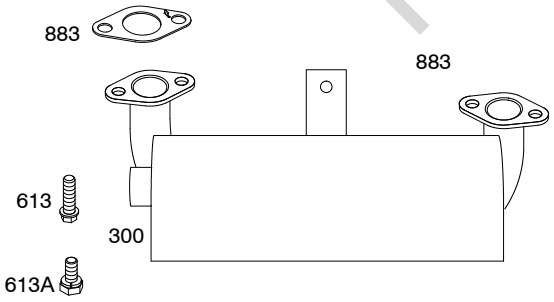

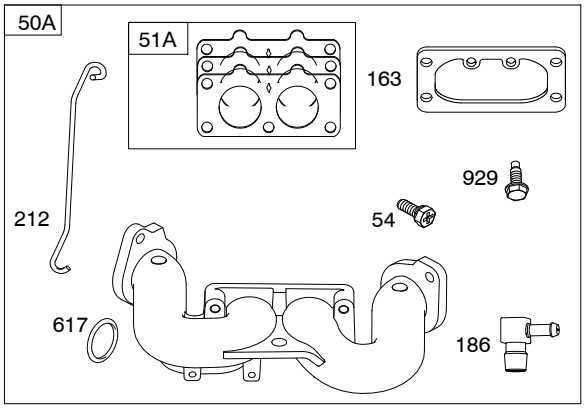

Not for Reproduction

44L700

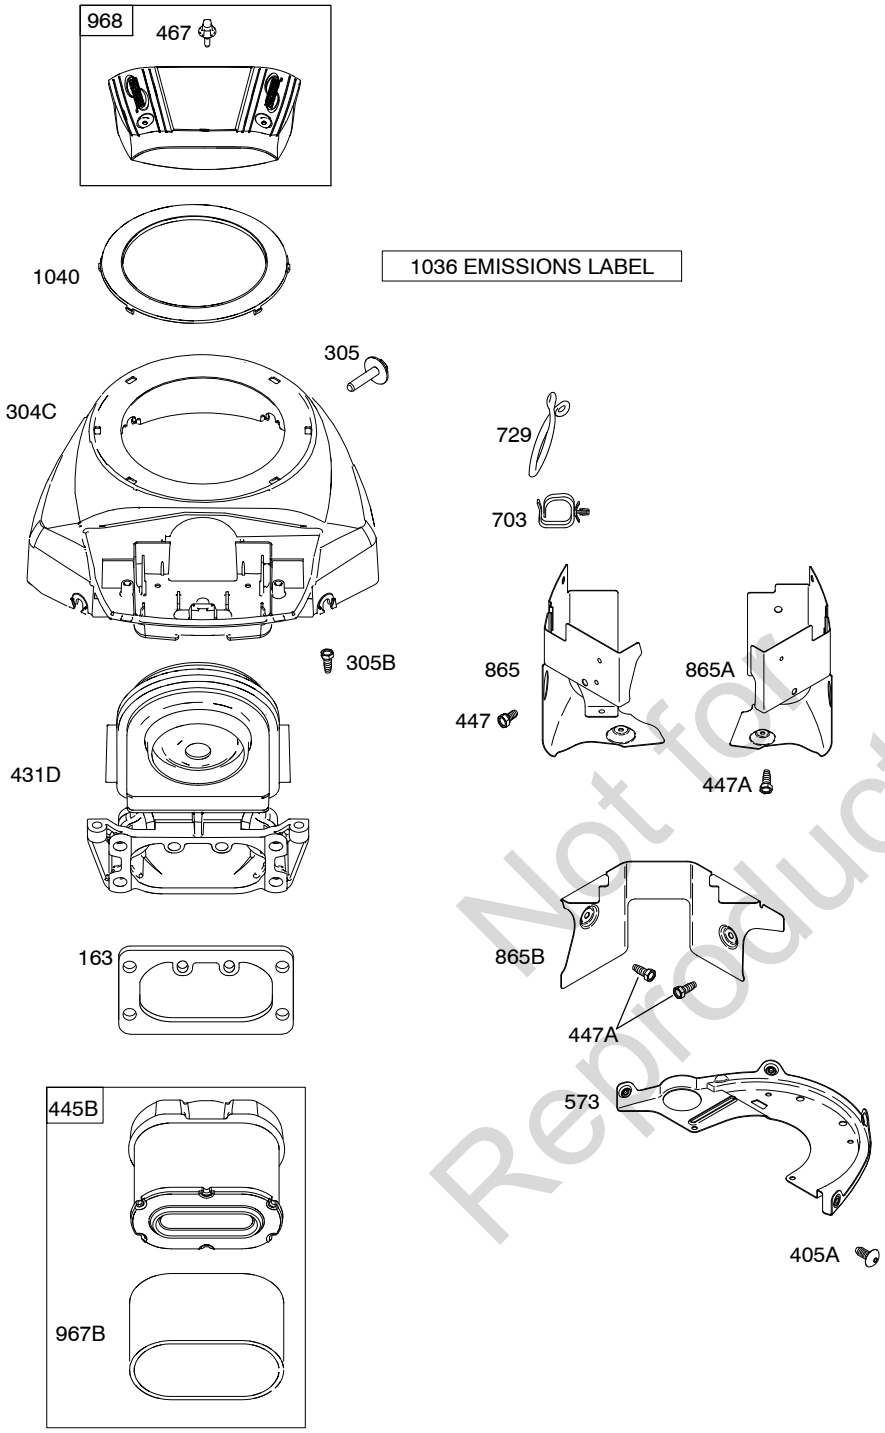

Not for Reproduction

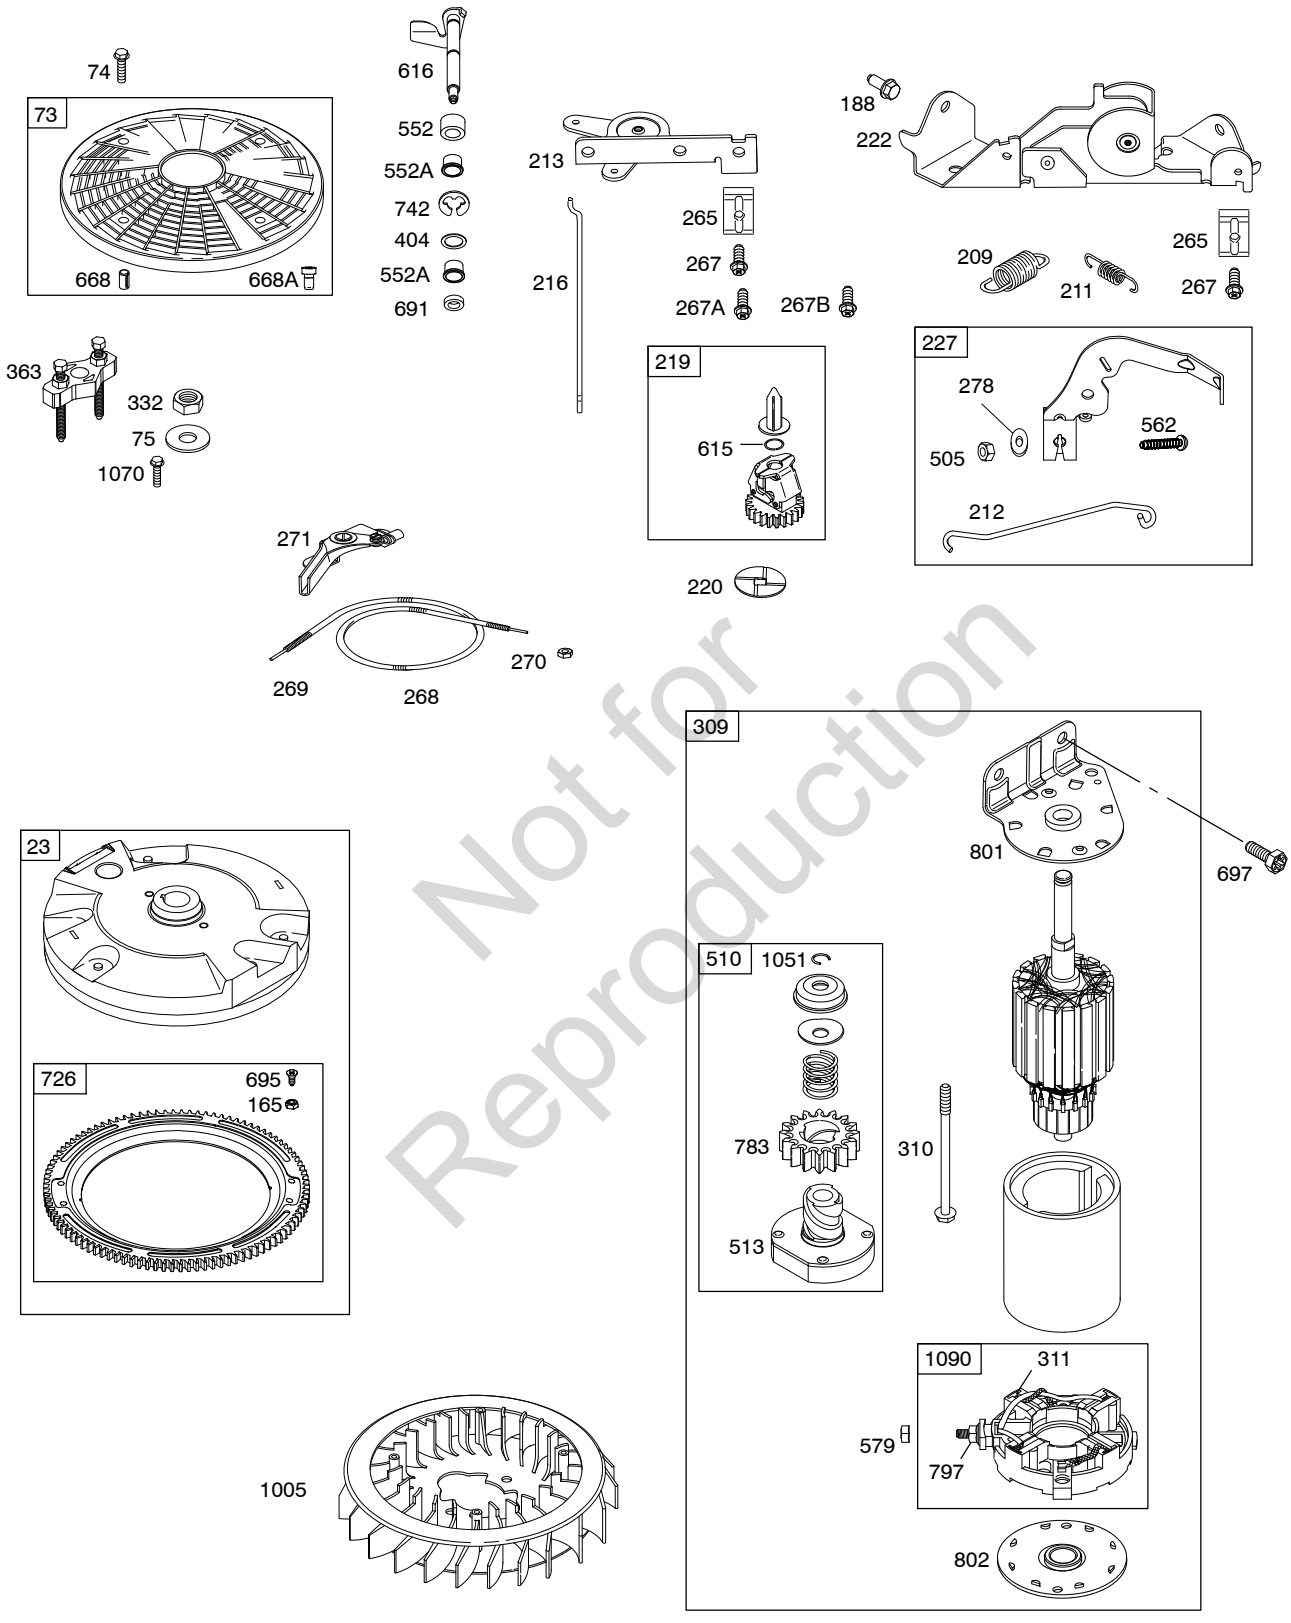

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

DUAL CIRCUIT	5 - 9 AMP	10 - 16 AMP
474C 1059	474A 1059	474B 1059
877C	877A	877B
878C	578A	578A
NOTE: *All Stators Use a No. 1119 Mounting Screw.* ***NOTE:*** *The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.*	526A 501A	526B 501B

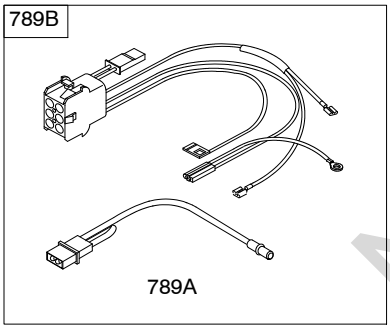

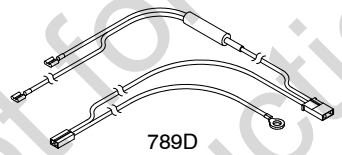

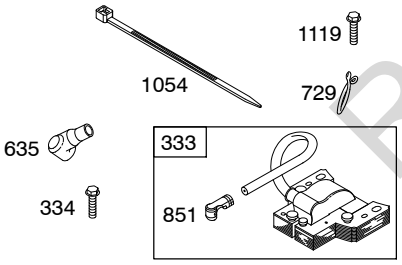

Not for Reproduction

REF. NO.	PART NO.	DESCRIPTION
1	**793564**	Cylinder Assembly
2	**499585**	Kit-Bushing/Seal (Magneto Side)
3	**391086s**	Seal-Oil (Magneto Side)
4	**699747**	Sump-Engine
4B	**796307**	Sump-Engine Used on Type No(s). 0025, 0026, 0027, 0035, 0036, 0037, 0117, 0118, 0128, 0130, 0144, 0719, 0723, 1224.
5	**792299**	Head-Cylinder (Cylinder 1)
		------ Note ------
		796231 Head-Cylinder (Cylinder 1) Used on Type No(s). 0025, 0026, 0027, 0035, 0036, 0037, 0117, 0118, 0128, 0130, 0144, 0719, 0723, 1224.
5A	**792300**	Head-Cylinder (Cylinder 2)
		------ Note ------
		796232 Head-Cylinder (Cylinder 2) Used on Type No(s). 0025, 0026, 0027, 0035, 0036, 0037, 0117, 0118, 0128, 0130, 0144, 0719, 0723, 1224.
7	**693997**	Gasket-Cylinder Head
8	**792185**	Breather Assembly
9	**690937**	Gasket-Breather
10	**691108**	Screw (Breather Assembly)
11	**792184**	Tube-Breather
12	**697227**	Gasket-Crankcase
13	**791130**	Screw (Cylinder Head)
		------ Note ------
		793988 Screw (Cylinder Head) Used on Type No(s). 0025, 0026, 0027, 0035, 0036, 0037, 0117, 0118, 0128, 0130, 0144, 0719, 0723, 1224.
15	**691680**	Plug-Oil Drain
15A	**690946**	Plug-Oil Drain
16	**699700**	Crankshaft
		------ Note ------
		796257 Crankshaft Used on Type No(s). 0025, 0035.
		796256 Crankshaft Used on Type No(s). 0026, 0036.
		796237 Crankshaft Used on Type No(s). 0027, 0037, 0117, 0118, 0128, 0130, 0144, 0719, 0723, 1224.
20	**795387**	Seal-Oil (PTO Side)
22	**694966**	Screw (Crankcase Cover/Sump)
23	**691053**	Flywheel
		------ Note ------
		691054 Flywheel Used on Type No(s). 0100, 0118, 0130.
24	**222698s**	Key-Flywheel
25	**792023**	Piston Assembly (Standard)
		------ Note ------
		792072 Piston Assembly (.020" Oversize)
26	**792026**	Ring Set (Standard)
		------ Note ------
		792073 Ring Set (.020" Oversize)
27	**690975**	Lock-Piston Pin
28	**690229**	Pin-Piston
		------ Note ------
		696581 Pin-Piston Used on Type No(s). 0025, 0026, 0027, 0035, 0036, 0037, 0117, 0118, 0128, 0130, 0144, 0719, 0723, 1224.
29	**699699**	Rod-Connecting
		------ Note ------
		796209 Rod-Connecting Used on Type No(s). 0025, 0026, 0027, 0035, 0036, 0037, 0117, 0118, 0128, 0130, 0144, 0719, 0723, 1224.
32	**690976**	Screw (Connecting Rod)
33	**697576**	Valve-Exhaust
34	**792200**	Valve-Intake
35	**694865**	Spring-Valve (Intake)
36	**694865**	Spring-Valve (Exhaust)
42	**499586**	Keeper-Valve
45	**690977**	Tappet-Valve
46	**790562**	Camshaft
50	**695241**	Manifold-Intake
51A	**795123**	Gasket-Intake
51E	**690949**	Gasket-Intake
53	**690951**	Stud (Carburetor)
54	**699816**	Screw
73	**494439**	Screen-Rotating
74	**698425**	Screw (Rotating Screen)
75	**691056**	Washer (Flywheel)

Not for Reproduction

44L700

REF. NO.	PART NO.	DESCRIPTION
95	**690718**	Screw (Throttle Valve)
98	**699721**	Kit-Idle Speed
104	**694918**	Pin-Float Hinge
105	**698537**	Valve-Float Needle
108	**699723**	Valve-Choke
117	**792296**	Jet-Main (Standard) (Left)(Nikki)
117A	**842627**	Jet-Main (Standard) (Right)(Nikki)
118	**699457**	Jet-Main (High Altitude) (Left)(Nikki)
118A	**699733**	Jet-Main (High Altitude) (Right)(Nikki)
121	**792455**	Kit-Carburetor Overhaul
125A	**792295**	Carburetor
		------ Note ------
		796227 Carburetor Used on Type No(s). 0025, 0026, 0027, 0035, 0036, 0037, 0117, 0118, 0128, 0130, 0144, 0719, 0723, 1224.
130	**690993**	Valve-Throttle
131	**499805**	Kit-Throttle Shaft
133	**699724**	Float-Carburetor
135	**699729**	Tube-Fuel Transfer
137	**690994**	Gasket-Float Bowl
141	**699722**	Kit-Choke Shaft
		------ Note ------
		796228 Kit-Choke Shaft Used on Type No(s). 0025, 0026, 0027, 0035, 0036, 0037, 0117, 0118, 0128, 0130, 0144, 0719, 0723, 1224.
142	**699726**	Nozzle-Carburetor
146	**690979**	Key-Timing
150	**690995**	Gasket-Nozzle
163	**691001**	Gasket-Air Cleaner
165	**693148**	Nut (Ring Gear)
186	**795985**	Connector-Hose
186A	**796532**	Connector-Hose (Oil Drain)
187A	**791766**	Line-Fuel (Cut to Required Length)
187E	**791801**	Line-Fuel (Molded)
188	**691108**	Screw (Control Bracket)
192	**690083**	Adjuster-Rocker Arm
209	**793340**	Spring-Governor Used on Type No(s). 0025, 0115, 0116, 0118, 0130, 1038.
		------ Note ------
		793343 Spring-Governor Used on Type No(s). 0026, 0027, 0100, 0117.
		795086 Spring-Governor Used on Type No(s). 0112, 0125, 0593.
		793527 Spring-Governor Used on Type No(s). 0123.
		796297 Spring-Governor Used on Type No(s). 0035, 0036, 0037, 0128.
		796224 Spring-Governor Used on Type No(s). 0144, 0719, 1224.
		796227 Spring-Governor Used on Type No(s). 0723.
		795086 Spring-Governor (Used After Code Date 06081400). Used on Type No(s). 0111.
		698071 Spring-Governor (Used Before Code Date 06081500). Used on Type No(s). 0111.
211	**691019**	Spring-Governed Idle
		------ Note ------
		796225 Spring-Governed Idle Used on Type No(s). 0035, 0036, 0037, 0128, 0144, 0719, 0723, 1224.
212	**695238**	Link-Throttle
213	**691021**	Bracket-Choke Control
216	**691022**	Link-Choke
217	**695409**	Spring-Choke Return Used on Type No(s). 0025, 0026, 0027, 0035, 0036, 0037, 0117, 0118, 0128, 0130, 0144, 0719, 0723, 1224.
219	**793338**	Gear-Governor
220	**690412**	Washer (Governor Gear)
221	**841026**	Cup-Governor
222	**698761**	Bracket-Control
		------ Note ------
		796226 Bracket-Control Used on Type No(s). 0035, 0036, 0037, 0128, 0144, 0719, 0723, 1224.
227	**796223**	Lever-Governor Control (Used After Code Date 08071300).
		------ Note ------
		792492 Lever-Governor Control (Used Before Code Date 08071400).
231	**690718**	Screw (Choke Valve)
239	**697049**	Switch-Oil Pressure
		------ Note ------
		792028 Switch-Oil Pressure Used on Type No(s). 0117, 0593, 0719, 0723.

Not for Reproduction

REF. NO.	PART NO.	DESCRIPTION
240A	**695666**	Filter-Fuel
250	**690957**	Retainer-Breather
252	**794389**	Collector-Oil
265	**691024**	Clamp-Casing
267	**691044**	Screw (Casing Clamp) (.630 Length)
267A	**695134**	Screw (Casing Clamp) (.625 Length)
267B	**691025**	Screw (Casing Clamp) (.703 Length)
268	**691025**	Casing-Control Wire
269	**691026**	Wire-Control
270	**691027**	Nut
271	**691028**	Lever-Control
276A	**695410**	Washer-Sealing
278	**792651**	Washer (Governor Control Lever)
287	**691108**	Screw (Dipstick Tube)
300	**696226**	Muffler
304C	**796678**	Housing-Blower (Black) (Used After Code Date 08100500).
		------ Note ------
		795878 Housing-Blower (Black) (Used Before Code Date 08100600).
305	**691005**	Screw (Blower Housing)
305B	**790690**	Screw (Blower Housing to Intake Elbow)
309	**499521**	Motor-Starter
		------ Note ------
		497595 Motor-Starter Used on Type No(s). 0125, 0593, 0719, 0723.
		795121 Motor-Starter Used on Type No(s). 0025, 0026, 0027, 0035, 0036, 0037, 0112, 0115, 0116, 0117, 0144.
310	**691263**	Screw (Starter Motor)
		------ Note ------
		690323 Screw (Starter Motor) Used on Type No(s). 0125, 0593, 0719, 0723.
311	**497608**	Brush Set
332	**691059**	Nut (Flywheel)
333	**691060**	Armature-Magneto
334	**691061**	Screw (Magneto Armature)
337	**491055s**	Plug-Spark
		------ Note ------
		691043 Plug-Spark Used on Type No(s). 0118, 0128, 0130.
		696202 Plug-Spark Used on Type No(s). 0111, 1224.
358A	**694012**	Gasket Set-Engine
363	**19203**	Puller-Flywheel
383	**19374s**	Wrench-Spark Plug
385	**691108**	Screw (Fuel Pump)
387	**808656**	Pump-Fuel
404	**690442**	Washer (Governor Crank)
405A	**697820**	Screw (Back Plate)
415	**794903**	Plug (Engine Sump)
418	**795912**	Plate-Carburetor
431D	**792297**	Elbow-Intake
445B	**792105**	Filter-Air Cleaner Cartridge
447	**691003**	Screw (Air Guide Cover)
447A	**691108**	Screw (Air Guide Cover)
467	**790697**	Knob-Air Cleaner (1" Long)
474A	**696457**	Alternator (Tri-Circuit) Used on Type No(s). 0128, 0593, 0719, 0723.
474B	**696458**	Alternator (10-16 Amp Circuit)
474C	**696459**	Alternator (Dual Circuit) Used on Type No(s). 0100, 0118, 0130.
501A	**794360**	Regulator Used on Type No(s). 0128, 0593, 0719, 0723.
501B	**691185**	Regulator
505	**691029**	Nut (Governor Control Lever)
510	**696541**	Drive-Starter
512	**796530**	Hose-Oil Drain
513	**692024**	Clutch-Drive
523	**691036**	Dipstick
524	**691032**	Seal-Dipstick Tube
525	**691037**	Tube-Dipstick
526A	**691129**	Screw (Regulator) Used on Type No(s). 0128, 0593, 0719, 0723.
526B	**691108**	Screw (Regulator)
552	**690552**	Bushing-Governor Crank
		------ Note ------
		796638 Bushing-Governor Crank Used on Type No(s). 0025, 0026, 0027, 0035, 0036, 0037, 0117, 0118, 0128, 0130, 0144, 0719, 0723, 1224.
552A	**690553**	Bushing-Governor Crank
562	**690311**	Bolt (Governor Control Lever)
573	**790444**	Plate-Back
578A	**691208**	Wire Assembly
579	**691029**	Nut (Starter Cable)
601	**791850**	Clamp-Hose (Green)
601A	**691038**	Clamp-Hose (Black)
613	**690341**	Screw (Muffler)

Not for Reproduction

44L700

REF. NO.	PART NO.	DESCRIPTION
613A	**690297**	Screw (Muffler)
615	**698290**	Retainer-Governor Shaft
616	**691045**	Crank-Governor
617	**697891**	Seal-O Ring (Intake Manifold)
628	**691108**	Screw (Fuel Pump Bracket)
633	**690998**	Seal-Choke/Throttle Shaft
		------ Note ------
		699813 Seal-Choke/Throttle Shaft Used on Type No(s). 0025, 0026, 0027, 0035, 0036, 0037, 0117, 0118, 0128, 0130, 0144, 0719, 0723, 1224.
635	**66538s**	Boot-Spark Plug
654	**690958**	Nut (Carburetor)
668	**691500**	Spacer
668A	**691215**	Spacer
672	**690234**	Gasket-Carburetor Plate
691	**790574**	Seal-Governor Shaft
695	**693149**	Screw (Ring Gear)
697	**690372**	Screw (Drive Cap)
703	**691010**	Clip
718	**690959**	Pin-Locating
726	**499612**	Gear-Ring
729	**694123**	Clip-Wire
741	**690980**	Gear-Timing
742	**690328**	Retainer-E Ring
750	**696999**	Screw (Oil Pump Cover)
750B	**796208**	Screw (Oil Pump Cover) Used on Type No(s). 0025, 0026, 0027, 0035, 0036, 0037, 0117, 0118, 0128, 0130, 0144, 0719, 0723, 1224.
783	**695708**	Gear-Pinion
788	**691039**	Bracket-Fuel Pump (Used Before Code Date 06072800).
788A	**793145**	Bracket-Fuel Pump (Used After Code Date 06072700).
789A	**790544**	Harness-Wiring
789B	**698330**	Harness-Wiring
789D	**691220**	Harness-Wiring Used on Type No(s). 0025, 0026, 0027, 0035, 0036, 0037.
797	**693167**	Nut (Brush Retainer)
798	**697890**	Screw (Rocker Arm)
801	**691283**	Cap-Drive
802	**691286**	Cap-End
842	**691031**	Seal-O Ring (Dipstick Tube)
847	**499602**	Dipstick/Tube Assembly
850	**100100**	Sealant-Liquid
851	**493880s**	Terminal-Spark Plug
865	**691012**	Cover-Air Guide (Cylinder 1)
865A	**796541**	Cover-Air Guide (Cylinder 2) (Used After Code Date 08080300).
		------ Note ------
		793205 Cover-Air Guide (Cylinder 2) (Used Before Code Date 08080400).
865B	**792286**	Cover-Air Guide (Valley)
868	**690968**	Seal-Valve
877A	**393537**	Wire/Connector-Alternator
877B	**399916**	Wire/Connector-Alternator
877C	**393456**	Wire/Connector-Alternator
878C	**398661**	Harness-Alternator
883	**690970**	Gasket-Exhaust
914	**691127**	Screw (Rocker Cover)
918	**793147**	Hose-Vacuum (Used After Code Date 06072700).
		------ Note ------
		694000 Hose-Vacuum (Used Before Code Date 06072800).
929	**695239**	Screw (Choke Control Bracket)

Not for Reproduction

REF. NO.	PART NO.	DESCRIPTION
943	**690589**	Seal-O Ring (Oil Pump Cover)
943A	**796222**	Seal-O Ring (Oil Pump Cover) Used on Type No(s). 0025, 0026, 0027, 0035, 0036, 0037, 0117, 0118, 0128, 0130, 0144, 0719, 0723, 1224.
947A	**841546**	Solenoid-Fuel
965	**499613**	Cover-Oil Pump
965A	**796221**	Cover-Oil Pump Used on Type No(s). 0025, 0026, 0027, 0035, 0036, 0037, 0117, 0118, 0128, 0130, 0144, 0719, 0723, 1224.
967B	**792303**	Filter-Pre Cleaner
968	**795120**	Cover-Air Cleaner
975A	**793592**	Bowl-Float
977	**792456**	Gasket Set-Carburetor
987	**691000**	Seal-Throttle Shaft
1005	**791236**	Fan-Flywheel
1013	**690954**	Nipple-Oil Filter
1017	**690770**	Screen-Oil Pump
1017A	**796214**	Screen-Oil Pump Used on Type No(s). 0025, 0026, 0027, 0035, 0036, 0037, 0117, 0118, 0128, 0130, 0144, 0719, 0723, 1224.
1022	**690971**	Gasket-Rocker Cover
1023	**793146**	Cover-Rocker (Cylinder 1) (Used After Code Date 06072700). **------ Note ------** **499599** Cover-Rocker (Cylinder 1) (Used Before Code Date 06072800).
1023A	**499600**	Cover-Rocker (Cylinder 2)
1024A	**794644**	Pump-Oil
1024B	**796220**	Pump-Oil Used on Type No(s). 0025, 0026, 0027, 0035, 0036, 0037, 0117, 0118, 0128, 0130, 0144, 0719, 0723, 1224.
1026	**690981**	Rod-Push (Steel)
1026A	**690982**	Rod-Push (Aluminum)
1027	**492932S**	Filter-Oil Used on Type No(s). 0115, 0116, 0144.
1027A	**696854**	Filter-Oil
1029	**690972**	Arm-Rocker
1035	**691042**	Shaft-Pump
1036		Label-Emissions (Available from a Briggs and Stratton Authorized Dealer)
1040	**791237**	Plate-Trim
1051	**691265**	Ring-Retaining
1054	**280275**	Tie-Cable
1058	**276245**	Operator's Manual (Emission)
1059	**698516**	Kit-Screw/Washer
1070	**691058**	Screw (Flywheel Fan)
1090	**691293**	Retainer-Brush
1095	**694013**	Gasket Set-Valve
1100	**791959**	Pivot-Rocker Arm
1119	**691183**	Screw (Alternator)
1123A	**841653**	Seal-O Ring (Solenoid Retainer)
1124	**690988**	Seal-O Ring (Fuel Transfer Tube)
1126	**690991**	Screw (Fuel Transfer Tube)
1127	**695407**	Screw (Float Bowl)
1128	**690990**	Screw (Carburetor Nozzle)
1319	**794467**	Label-Warning
1330	**273521**	Repair Manual

Not for Reproduction

Not for
Reproduction

Not for
Reproduction

Not for Reproduction